

4.9 PL Frequencies and Codes

PL Freq (Hz)	Motorola Code	Equiv. PL Code		PL Freq (Hz)	Motorola Code	Equiv. PL Code
67	001	XZ		136.5	022	4Z
69.3	002	WZ		141.3	023	4A
71.9	003	XA		146.2	024	4B
74.4	004	WA		151.4	025	5Z
77	005	XB		156.7	026	5A
79.7	006	WB		162.2	027	5B
82.5	007	YZ		167.9	028	6Z
85.4	008	YA		173.8	029	6A
88.5	009	YB		179.9	030	6B
91.5	010	ZZ		186.2	031	7Z
94.8	011	ZA		192.8	032	7A
97.4	012	ZB		203.5	033	M1
100	013	1Z		206.5	034	8Z
103.5	014	1A		210.7	035	M2
107.2	015	1B		218.1	036	M3
110.9	016	2Z		225.7	037	M4
114.8	017	2A		229.1	038	9Z
118.8	018	2B		233.6	039	M5
123	019	3Z		241.8	040	M6
127.3	020	3A		250.3	041	M7
131.8	021	3B		254.1	042	0Z
				PL1	PL1	
				PL2	PL2	
				PL3	PL3	

NOTE: PL1, PL2, PL3 are the User Defined PL Frequencies.

4.10 DPL Codes

DPL Code	Motorola Code	DPL Code	Motorola Code	DPL Code	Motorola Code	DPL Code	Motorola Code
23	043	152	065	343	087	606	109
25	044	155	066	346	088	612	110
26	045	156	067	351	089	624	111
31	046	162	068	364	090	627	112
32	047	165	069	365	091	631	113
43	048	172	070	371	092	632	114
47	049	174	071	411	093	645*	115
51	050	205	072	412	094	654	116
54	051	223	073	413	095	662	117
65	052	226	074	423	096	664	118
71	053	243	075	431	097	703	119
72	054	244	076	432	098	712	120
73	055	245	077	445	099	723	121
74	056	251	078	464	100	731	122
114	057	261	079	465	101	732	123
115	058	263	080	466	102	734	124
116	059	265	081	503	103	743	125
125	060	271	082	506	104	754	126
131	061	306	083	516	105		
132	062	311	084	532	106		
134	063	315	085	546	107		
143	064	331	086	565	108		

NOTE: The codes marked with an asterisk are not part of the 83 standard EIA/TIA-603 codes.